

RealWear Navigator 500

Quick Start Guide



ATTENTION: Before using the Navigator 500 for the first time, visit <https://www.realwear.at/en/support> from another device (phone or computer).

NOTE: Your Navigator 500 is shipped partially charged from the factory. If the battery level is too low, please see charging instructions below.

Front View



Rear View



Switching on and Adjusting


Adjust camera position by rotating up / down for the best view

Adjust the Display so you can see all 4 corners of the display and then lock it into position using the locking ring



Setting up the Display

Adjust the workband so that the Nav500 rests horizontally, and the display slightly below the line of sight

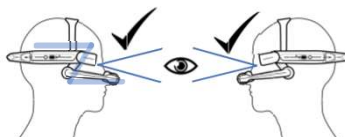

Position the boom arm and elbow joints into a "Z" shape, below the line of sight, left or right eye.




Do not extend the display too far from your eye. Keep the display as close to the eye as possible for the best view.

Voice Input



"My Programs"

The Navigator 500 is controlled simply by using your voice and head motion. Speak out clearly, say what you can see on the screen. Just say the name of the icon you want to open. To use the bubbles 1 with numbers, just say "select item 1".

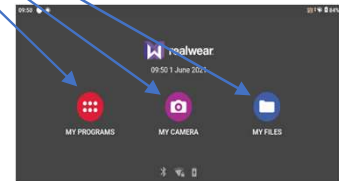

Charging the Navigator 500



Charging the Navigator 500

1. Connect the USB-C charging cable to the USB port located under the rear cover on the same side as the boom arm.
2. Connect the charging cable to the wall charger and plug the charger into a wall socket. The power button lights up ORANGE while charging. The Power button will light up GREEN, once it reached 90% battery status.

Rechargeable Battery



Workband

